

## *Operating Instructions*

# *RM-PL Basic RM-PL Basic plus*

*Basic Module  
with ethernet connector  
for use in the PipeMonitor System*



# Contents

<b>Technical Data</b> .....	<b>3</b>
<b>Ordering Data</b> .....	<b>3</b>
<b>General Information</b> .....	<b>4</b>
<b>Designated Use</b> .....	<b>4</b>
<b>Safety Instructions</b> .....	<b>5</b>
<b>Installation</b> .....	<b>6</b>
<b>Mounting</b> .....	<b>6</b>
<b>Electrical connection</b> .....	<b>7</b>
<b>Function/Start-up</b> .....	<b>8</b>
<b>Start-up</b> .....	<b>8</b>
LEDs of the RM-Basic module .....	<b>9</b>
<b>Configuration and operation of the RM-Basic module</b> .....	<b>9</b>
<b>Show display contents</b> .....	<b>10</b>
<b>Explanation of display contents / Configuration</b> .....	<b>11</b>
1. System display .....	<b>11</b>
2. Network settings .....	<b>11</b>
4. Basic module settings .....	<b>13</b>
5. Time and software settings .....	<b>14</b>
<b>Configuration by Ethernet</b> .....	<b>15</b>
1. Overview/menu .....	<b>16</b>
2. Basic Module Info .....	<b>17</b>
3. RM-Bus Configuration .....	<b>18</b>
4. Logfile .....	<b>23</b>
5. Change password .....	<b>26</b>
6. Help if the password is lost .....	<b>27</b>
<b>EC Declaration of Conformity</b> .....	<b>28</b>



## Important!

**It is imperative to read and observe all safety instructions prior to initial operation!**

© 2017 LANCIER Monitoring GmbH.

This operating instruction must not be reproduced or made available, either complete or in extracts, before the specific consent of LANCIER Monitoring GmbH.

## Technical Data

Supply voltage	21 .. 72 V DC
Output voltage	12 V/1.25 A 5 V/1.6 A
Display	Graphic display, blue back-lit
LEDs	12 V, 5 V, 3,3 V, Link, Traffic
Interfaces	Ethernet 10/100 Mbit/s RS232 alternatively clamped connection or SUB-D RS485 CAN-Bus
Local User Interface	by push-button
Operating temperature	-20 °C .. +65 °C
Storage temperature	-40 °C .. +70 °C
Admissible humidity	0 .. 95 % rel. humidity, non-condensing
Dimensions RM-Module (W x D x H)	108 x 62.2 x 89.7 mm

## Ordering Data

### Basic module RM-PL Basic

Power supply and display module for PipeMonitor **Order-No. 074001.300**

### Basic module RM-PL Basic plus

Power supply and display module for PipeMonitor  
for fault locating RM-PL-Modules with data storage **Order-No. 074001.200**

### Accessories

#### Measuring module RM-PL NiCr short

for district heating monitoring  
with fault localisation for track length of up to 750 m **Order-No. 074007.100**

#### Measuring module RM-PL NiCr

for district heating monitoring  
with fault localisation for track length of up to 1500 m **Order-No. 074007.200**

#### Measuring module RM-PL Cu

for district heating monitoring  
without fault localisation **Order-No. 074702.000**

#### Bus expansion RM-Bus-Extender

with connection cable **Order-No. 074002.000**

#### RM-Power

voltage converter 110 .. 230 V AC / 24 V DC **Order-No. 074009.000**

## General Information

These operating instructions should make it easier for you to become acquainted with the product. They contain important information to ensure safe, appropriate and cost-effective use of the equipment.

This operating instructions apply equally to modules delivered individually as well as modules shipped as part of an already pre-installed, fully operational pipe monitoring system. In the second scenario, users can disregard the following points:

- Installation and
- Electrical connection

The operating instructions endorse the directives of national regulations for the prevention of accidents and the protection of the environment.



**These operating instructions shall be read and adopted by anyone assigned to work with/on the equipment, e. g. during operation to include setting-up, maintenance trouble-shooting.**

In addition to the operating instructions and the mandatory regulations for the prevention of accidents, applicable in the operator's country and at the place of use, the recognized technical regulations for safe and professional operation shall also be observed.

## Designated Use

The RM-PL Basic (plus) module is designed as a power supply for measuring modules in the PipeMonitor System by LANCIER Monitoring. In addition, it controls the display function for measurement readings and internal parameters of the connected measuring modules as well as communication with superordinate control systems.

Any other use is considered improper. The manufacturer is not liable for any resulting damage; the user alone bears the risk!

## Safety Instructions



### Important!

**Read and observe safety instructions prior to initial operation!**

- Keep the operating instructions ready to hand!



### Accident prevention!

**All circuit lines must be dead before mounting or demounting the system and the opening of its housing!**

- The unit should only be operated in technically-sound condition, for its designated use, with safety and risk awareness in mind, taking into account the operating instructions. In particular, operational faults, which can compromise safety, should be rectified immediately!
- Do not make any modifications to the equipment!
- Mounting, maintenance and repair work should only be performed by trained personnel!
- Only use original LANCIER Monitoring replacement parts!



### Important!

**Obey handling instructions. Electrostatic discharge (ESD) damage.**



### WARNING!

**The place of installation of the RM module should have a complete lightning protection plan that covers power supply cables as well as data and telecommunications cables.**




# Installation

## Mounting

The Rail-Module-Bus-System is composed of a basic module (1) and various measuring modules (6), which are clipped on a DIN rail (2). When mounting the DIN rail (2) make sure that the spacing of the mounting screws matches the spacing of the ports on the back of the bus connecting plates (3).

The basic module (1) has a bus connecting plate (3) that must be clipped on to the DIN rail (2).


The basic module (1) can now be attached to the bus connecting plate (3) using opened connecting clips (5). The connecting clips (5) must be pushed in until they lock into place to secure them.

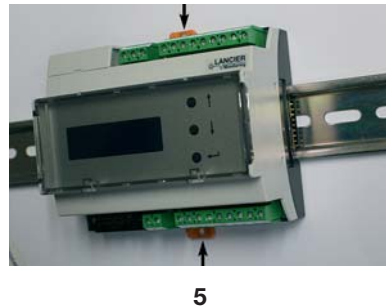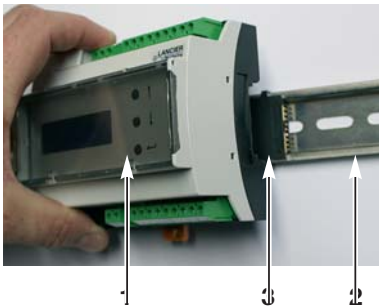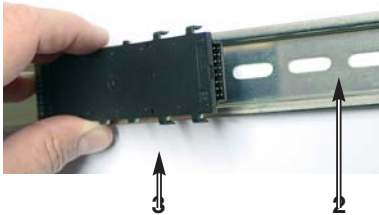

Generally, there is not enough space on the DIN rails for 10 measuring modules.

In this case, further measuring modules must be connected to additional DIN rails, which are mounted below the first one.

Connection is made at the basic module's module interface using the RM bus extender (14) with its ribbon cable (15).

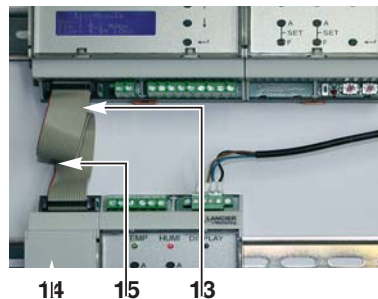

## Electrical connection




### Accident prevention!

Before working on the bus system the supply voltage **MUST** be switched off!

The RM-Basic module is connected to terminals X1.1 and X1.2 with a 20...72 V<sub>DC</sub> power supply.

### Terminal assignment

<b>X1.1 bis 2</b>	Power supply
<b>X2.1 bis 7</b>	Communications interface
<b>X2.8 und 9</b>	not working
<b>X3.1 bis 2</b>	CAN-Bus
<b>X4</b>	RS232 Sub-D
<b>X5</b>	Ethernet RJ45

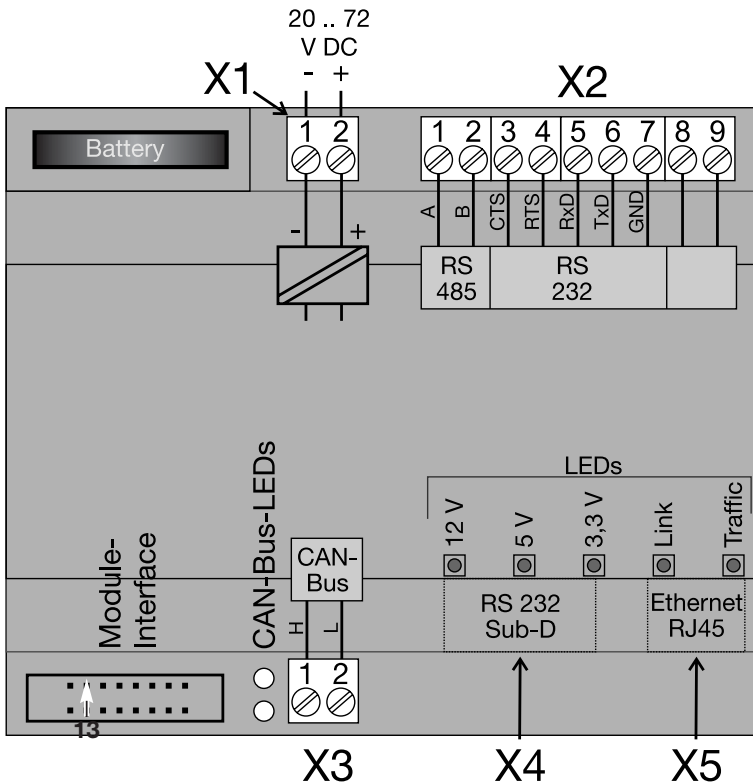


## Function/Start-up

The RM-Basic module is the core of the PipeMonitoring System by LANCIER Monitoring. It supplies power for the sensor module, displays measurements and parameters, and transmits the readings to superordinate control systems via one of the integrated interfaces. Communication between the modules is carried out by a CAN bus.

The RM-DC basic module's display is also used to set the threshold values of the connected sensors.

### Start-up

Once the power supply has been turned on the module is initialised and a self-test is carried out.

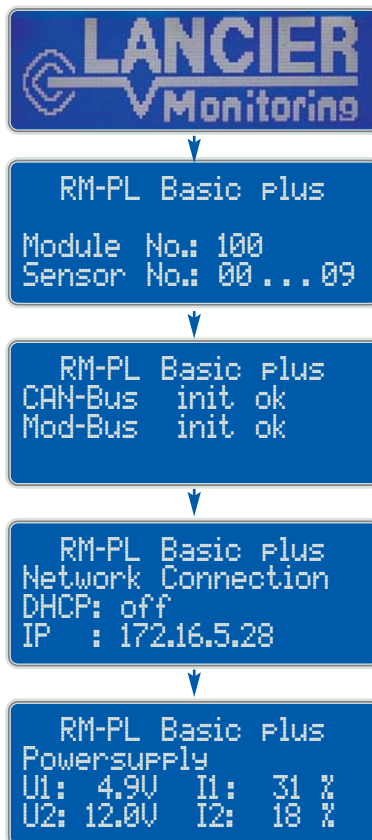

After pressing the “Enter” button (9) on the basic module, information on the internal voltage and power consumption is displayed:

U1 = 5 V rated voltage

U2 = 12 V rated voltage

I1 = Capacity utilisation U1

I2 = Capacity utilisation U2


Power consumption must not exceed 100% at either I1 or I2. If necessary, further basic modules should be used.



## LEDs of the RM-Basic module

There are 5 LEDs directly above the RS232 and the Ethernet interface, that show the operating condition:


- 3 green LEDs „12 V“, „5 V“ and „3,3 V“ illuminate promptly when the operating voltage is switched on.
- The green LED „Link“ illuminates when an Ethernet connection is present.
- The green LED „Traffic“ flashes during data exchange by the Ethernet.

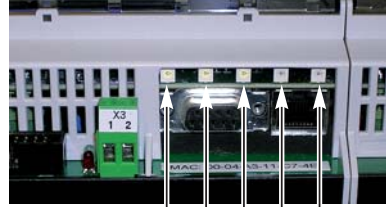

12V 5V 3,3V L T

## Configuration and operation of the RM-Basic module

The RM-Basic module (1) can be configured and operated by the integrated push-buttons (9-11) or by the Ethernet (see pages 15 ff.)

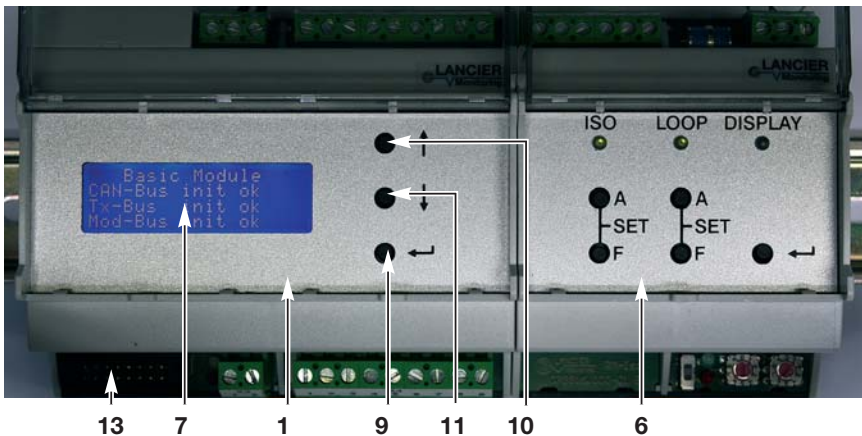

- 1 RM-Basic module
- 6 Measuring module
- 7 Display
- 9 „Enter“ push-button
- 10 „up“ push-button
- 11 „down“ push-button
- 13 Module interface for further basic modules

## Show display contents

All display contents are shown consecutively by pressing the „Enter” (9) button of the RM-Basic module:

### 1. Standard display = System display

Shows internal voltage and power consumption.

```
RM-PL Basic Plus
Powersupply
U1: 4.9V  I1: 31 %
U2: 12.0V I2: 18 %
```

Pressing the „Enter” (9) button shows:

### 2. Network settings

Shows the current network settings.

```
DHCP: off
IP  : 172.16.5.28
MK  : 255.255.0.0
GW  : 172.16.10.1
```

Pressing the „Enter” (9) button shows:

### 3. Basic module settings

Shows the basic module number and the assigned measuring modules.

```
RM-PL Basic Plus
Module No.: 100
Sensor No.: 00 ... 09
```

Pressing the „Enter” (9) button shows:

### 4. Time and software settings

Shows date and time of the internal clock and the release status of the software.

```
RM-PL Basic Plus
Date: 14.08.2013
Time: 10:36:05
Rev.: 01.00
```

Pressing the „Enter” (9) button leads back to:

### 1. Standard display

Shows internal voltage and power consumption.

```
RM-PL Basic Plus
Powersupply
U1: 4.9V  I1: 31 %
U2: 12.0V I2: 18 %
```

## Explanation of display contents / Configuration

### 1. System display

Internal voltage and power consumption indication:

- U1 = 5 V rated voltage
- U2 = 12 V rated voltage
- I1 = Capacity utilisation U1
- I2 = Capacity utilisation U2

```

Basic Module
Powersupply
U1: 4.9V  I1: 31 %
U2: 12.0V I2: 18 %
  
```

Power consumption must not exceed 100% at I1 or I2. If necessary, further basic modules should be used.

### 2. Network settings

Shows the current network settings:

**DHCP:** The **Dynamic Host Configuration Protocol** (DHCP) allows for an automatically issued network configuration of the RM-Basic module by the server. The factory setting is „off”.

Fix IP addresses should be used because of security reasons.

**IP:** **IP address of the RM-Basic module.** This address is arbitrary.

The IP address must be unique and must not overlap with any other address in the network.

**MK:** **Subnet Mask.** The subnet masks of a subnetwork are identical for all hosts of the specific subnet.

**GW:** **IP address of the gateway to the network.**

```

DHCP: off
IP   : 172.16.5.28
MK   : 255.255.0.0
GW   : 172.16.10.1
  
```

## Changing network settings



### Attention!

Changing network settings should happen in close collaboration with network administrators only, to avoid network failure.

### a. Changing DHCP settings

Display „Network settings”, then press the „Enter” (9) button for 5 sec. until a „:\*” appears at the DHCP setting in the display (7) .

```
RM-PL Basic Plus
DHCP: *off
```

DHCP settings can be changed now:

- pressing the button „up” (10) or „down” (11) alternates the setting between „on” and „off”.

**The new setting must be acknowledged by pressing the „Enter” button (9) once again.**

If setting „DHCP: on” is chosen, the module restarts because no further network settings are necessary. The module gets them automatically from the DHCP server.

```
Basic Module Plus
Network Config
! changed !
restart
```

If setting „DHCP: off” is chosen, the display moves forward to:

### b. Changing IP address

The first 3 digit block of the IP address is underlined and can be changed:

- pressing the button „up” (10) raises the value of the digit block.  
- pressing the button „down” (11) lowers the value of the digit block.

```
RM-PL Basic Plus
IP  : 192.168.000.002
---
```

The change of the digit block must be acknowledged by pressing the „Enter” button (9). Afterwards the cursor forwards to the next digit block, which is set in the same way.

After setting the last digit block and acknowledging the new setting by pressing the „Enter” button (9) the display moves forward to:

### c. Changing subnet mask address

The setting of the subnet mask address is carried out as described before at item b.

After setting the last digit block and acknowledging the new setting by pressing the „Enter” button (9) the display moves forward to:

```
RM-PL Basic Plus
MK  : 255.255.255.000
---
```

#### d. Changing gateway address

The setting of the gateway address is carried out as described before.

```
RM-PL Basic Plus
GW : 192.168.000.001
---
```

After setting the last digit block and acknowledging the new settings by pressing the „Enter” button (9) the module restarts.

If no value was changed, the module display returns to the screen „Network settings” without restart.

```
RM-PL Basic Plus
Network Config
! changed !
restart
```

#### 4. Basic module settings

Shows the basic module number and the assigned measuring modules.

```
RM-PL Basic Plus
Module No.: 100
Sensor No.: 00...09
```

#### Changing the basic module number



##### Important!

Entering this number is only necessary when,

- more than 1 basic module is in use or
- the addresses of available measuring modules require it.

When only one basic module is in use the factory setting of 100 can be applied without problem.

Basic module number and measuring module addresses are linked as follows:

- Basic module no. 100 ↔ Measuring module addresses 01 to 09,
- Basic module no. 101 ↔ Measuring module addresses 10 to 19,  
etc., until
- Basic module no. 109 ↔ Measuring module addresses 90 to 99

Every RM-Basic module (1) can hold a maximum of 10 measuring modules (6). The measuring modules are connected to the basic module (1) on a DIN rail using a bus connecting plate or an interface cable with the connecting plug (12).

If several basic modules (1) are available in a measuring bus, each one must have a unique basic module number.

### Changing the basic module number

Display „Basic module settings”, then press the „Enter” (9) button for 5 sec. until a “\*” appears in front of the digits of the module number on the display (7).

The basic module number can now be changed:


- Pressing the “up” button (10) raises the module number
- Pressing the “down” button (11) lowers the module number

The module number range is 100 to 109. After the maximum value of 109, the display jumps back to 100

The range of acceptable measuring module/sensor addresses is adjusted automatically when the module number is changed.


#### The changing of the basic module number must be confirmed by pressing the “Enter” button (9) again.

Subsequently, the module automatically restarts.

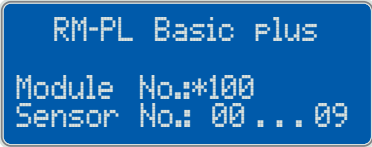

```

RM-PL Basic Plus
Module No.: *100
Sensor No.: 00...09
  
```

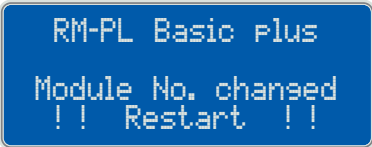

```


RM-PL Basic Plus
Module No. changed
!! Restart !!
  
```

## 5. Time and software settings

Shows date and time of the internal clock and the release status of the software.

Date format: DD.MM.YYYY

Time format: HH:MM:SS

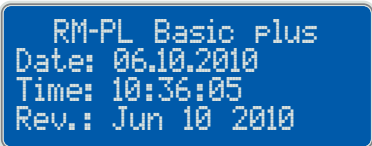


```

RM-PL Basic Plus
Date: 06.10.2010
Time: 10:36:05
Rev.: Jun 10 2010
  
```

### Changing time and software settings

Display „time and software settings” then press the „Enter” (9) button for 5 sec. until the right-hand shown display appears (7).

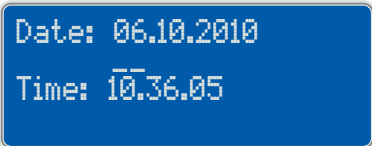

```

Date: 06.10.2010
Time: 10.36.05
  
```

The day value of the date is underlined and can be changed :

- Pressing the “up” button (10) raises the day value.
- Pressing the “down” button (11) lowers the day value.

The change of the day value must be acknowledged by pressing the „Enter” button (9). Afterwards the cursor forwards to the next (month) value, which is set in the same way. Year and time values are set in the same way.

**After setting the last value and acknowledging the new settings by pressing the „Enter” button (9) the module restarts.**

## Configuration by Ethernet


The RM-PL Basic module can be configured by Ethernet also using a web browser. The IP address must be known for this.

The connection to the module will be established after entering the IP address into the browser's address field.

**Access to the RM-PL Basic module's configuration is password protected.**

Factory settings: **User name:** http

**Password:** http

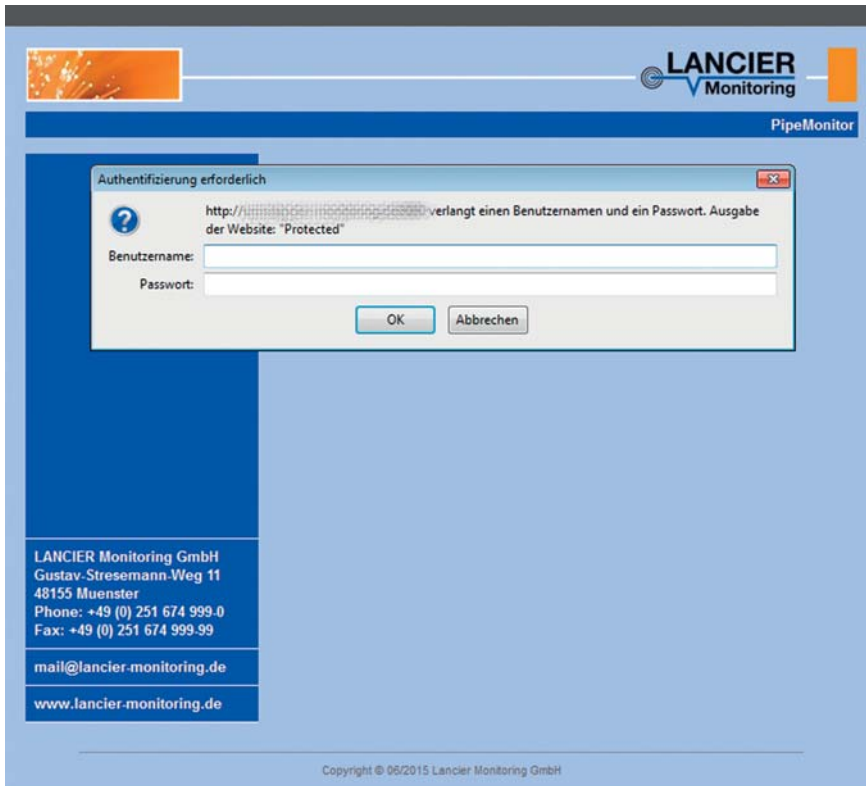

The screenshot displays the LANCIER Monitoring PipeMonitor web interface. At the top right, the LANCIER Monitoring logo is visible. Below it, the text "PipeMonitor" is displayed. A central dialog box titled "Authentifizierung erforderlich" (Authentication required) is overlaid on the page. The dialog box contains the following text: "http://[redacted] verlangt einen Benutzernamen und ein Passwort. Ausgabe der Website: 'Protected'". Below this text are two input fields: "Benutzername:" (Username) and "Passwort:" (Password). At the bottom of the dialog box are two buttons: "OK" and "Abbrechen" (Cancel). In the bottom left corner of the web page, contact information for LANCIER Monitoring GmbH is provided: "LANCIER Monitoring GmbH, Gustav-Stresemann-Weg 11, 48155 Muenster, Phone: +49 (0) 251 674 999-0, Fax: +49 (0) 251 674 999-99, mail@lancier-monitoring.de, www.lancier-monitoring.de". At the bottom center of the page, the copyright notice "Copyright © 09/2015 Lancier Monitoring GmbH" is displayed.

## 1. Overview/menu

Once the correct password has been entered the **Homepage/Overview** screen will appear:

In the left menu bar the following menu will appear:

- **Overview:** General information about the rail module bus.
- **Basic module info:** Displays the software version including revision status and the system display including internal voltage and load levels as well as the circuit diagram for connection cables and the reset option for the basic module.
- **RM bus configuration:** **Displays** all current measurement data and **Query of fault location** (only NiCr with RM Basic plus).  
**Configuration platform** for
  - the basic module,
  - all connected measuring modules.**Activation/Deactivation** of particular modules.
- **Log file:** **Displays** or **downloads** log files (list of all measurement data, approximately 20,000 data sets) in CSV format.
- **Change password:** Changes the **login password** to this configuration platform.

On the top right you have the option to switch languages by clicking on the corresponding country flag.



## 2. Basic Module Info

### 1. Page title: **RM-PL Basic (plus)**

Describes the **basic module** used. The basic module “plus” comes with additional fault location and data storage ability.

### 2. **Basic module for the rail module bus**

Displays the **software version** including revision status.

### 3. **Voltage supply**

System display including internal voltages and their respective loads:

RM-Bus +5V : 4.9V 35% (nominal voltage/load)

RM-Bus +12V : 12.0V 17% (nominal voltage/load)

Both at + 5V and at + 12V loads must not exceed the 100% mark.

If necessary, more basic modules must be used.

### 4. **Electrical connection**

Circuit diagram for connection cables.

### 5. **“Reboot Modul” button**

Restarts the basic module and rebuilds the connections to the measuring modules. All settings and values remain unchanged.

PipeMonitor

Overview

Basic Module Info

RM-Bus Configuration

Logfile

Change Password

## RM-PL Basic plus

### Basic module for the Rail-Module-Bus

Software Version: V1.15  
Rev. Date: Aug 2 2016 15:26:43

### Powersupply

RM-Bus +5V : 5.0V 42%  
RM-Bus +12V : 12.0V 35%

### Electrical connection

Reboot Module

LANCIER Monitoring GmbH  
Gustav-Stresemann-Weg 11  
48155 Muenster  
Phone: +49 (0) 251 674 999-0  
Fax: +49 (0) 251 674 999-99  
mail@lancier-monitoring.de  
www.lancier-monitoring.de

### 3. RM-Bus Configuration

#### 1. Displays current measured values of all modules at a glance

Readings **within the thresholds** are highlighted in **green**.

Measured values, which have **exceeded the alarm limits**, are highlighted in **red**.

**Interrupted pipe connections (ConError)** are highlighted in **pink** unterlegt.

**Acknowledged alarms** are highlighted in **orange**.

Overview

Basic Module Info

RM-Bus Configuration

Logfile

Change Password

LANCIER Monitoring GmbH  
Gustav-Stresemann-Weg 11  
48155 Muenster  
Phone: +49 (0) 251 674 999-0  
Fax: +49 (0) 251 674 999-99  
mail@lancier-monitoring.de  
www.lancier-monitoring.de

## RM-Bus

### Measurement Values

To display the module settings and to change them click on the [hyperlink](#) of the module name.

Module No.: 100	U1	U2				
<a href="#">RM-PL-Basis plus</a>	5.0V	12.0V				
Module No.: 1	Iso1	Loop1	Iso2	Loop2		
<a href="#">RM-PL-Cu</a>	50.000M	4.694k	50.000M	0.120k		
Module No.: 2	Iso1	Loop1	Iso2	Loop2	Faultloc.	
<a href="#">RM-PL-NiCr</a>	4.675M	2.507k	0.822M	2.447k		<a href="#">show</a>
Module No.: 3	Iso1	Loop1	ConErr	Loop2	Faultloc.	
<a href="#">RM-PL-NiCr short</a>	47.505M	0.565k	50.000M	5.000k		<a href="#">show</a>
Module No.: 4	Iso1	Loop1	Iso2	Loop2		
<a href="#">RM-PL-HDW</a>	0.000M	2.292k	0.000M	2.286k		
Module No.: 5	Act	Max	Values			
<a href="#">RM-Tx</a>	255	5	<a href="#">show</a>			

#### 2. Configuration of all modules

By clicking on the module names (1st column, underlined in blue), the corresponding configuration window will open.

Changed values must be saved by clicking on the "Save" button.

##### 2.1 Configuration of the basic module

###### General

- Module number: If multiple basic modules (**1**) exist in a measurement bus, they must each be assigned a unique basic module number. Possible module numbers are 100 to 109. An error message will appear when other values are entered.

Changes to the module number will automatically change the range of acceptable measuring module/sensor addresses.

**WARNING!**

Changes to the basic module number will cause previously assigned modules to be lost and these will no longer be displayed here.

Entering the original basic module number makes it possible to "find" these modules again.

- Host Name: Freely editable **name for the basic module** in the network.
- Serial No. Entry of serial no. (refer to name plate).  
**This entry is compulsory for the registration of the RM-Basic module at the UMS server.**

Overview

Basic Module Info

RM-Bus Configuration

Logfile

Change Password

---

LANCIER Monitoring GmbH  
Gustav-Stresemann-Weg 11  
48155 Muenster  
Phone: +49 (0) 251 674 999-0  
Fax: +49 (0) 251 674 999-99  
mail@lancier-monitoring.de  
www.lancier-monitoring.de

## RM-PL-Basic-plus Module Configuration

This page allows the configuration of the module's settings.

**CAUTION:** Incorrect settings may cause the module to lose network connectivity. Changing the Basic or Ethernet settings causes a reboot of the system.

Enter the new settings for the module below:

**Basic**

Software Version: V1.15

Module No.:  100...109

Host Name:

Serial No.:

**Clock**

Time:  hh:mm:ss

Date:  dd.mm.yyyy

**Ethernet**

Enable DHCP:

MAC Address:

IP Address:

Gateway:

Subnet Mask:

**Clock**

Settings of the internal clock (date and time) can be changed here.

Date format: DD.MM.YYYY

Time format: HH:MM:SS

A fault message will appear when unrealistic values are entered.

## Ethernet

Network settings can be changed here.



### Attention!

Changing network settings should happen in close collaboration with network administrators only, to avoid network failure.

## Description

- Checkbox „Enable DHCP”: The **Dynamic Host Configuration Protocol** (DHCP) allows for an automatically issued network configuration of the RM-Basic module by the server. The factory setting is „off”. Fix IP addresses should be used because of security reasons.  
If the checkbox is activated (ticked) no further network settings are necessary. The input fields of the other values are greyed out.
- MAC Address: The **MAC address** (unique hardware label) of the RM-Basic module is not editable.
- IP Address: Freely editable **IP address for the basic module** in the network.  
The IP address must be unique and must not overlap with any other address in the network.
- Gateway: Freely editable **IP address of the gateway to the network**.
- Subnet Mask: **Subnet Mask** (net mask) specifies to which Bit the address has to be shared with. The Bits (network part) masked by the net mask or indicated by the prefix length are identical to all hosts (computers) of a subnetwork.  
Freely editable **subnet mask for the basic module** in the network.

Changed settings must be acknowledged by clicking the button „**Save Config**”. Click on the "**Back**" button to leave the page without saving your changes.

- Overview
- Basic Module Info
- RM-Bus Configuration
- Logfile
- Change Password

## Reboot In Progress...

Your settings were successfully saved, and the RM-Basic Module is now rebooting to configure itself with the new settings.

Your RM-Basic Module is now located at: <http://10.0.0.125/>

---

### Reconnection Instructions

1. **Did you change the hostname, IP or MAC address?**  
It is necessary to clear the address caches in your web browser and OS. From the command prompt in Windows, enter "nbtstat -R" to clear the hostname cache, close your current web browser, open a new web browser, and then try to access the web address above.
2. **Did you try the IP address?**  
Try accessing the board directly at the IP address shown on the RM-Basic LCD screen. (ex: enter "http://192.168.0.2" into your browser). If this fails, then the IP address you set is not reachable.

Once the page has saved, it will be reloaded and display the changed values.

## 2.2 Configuration of the measuring modules

- **Module number:** The number of each measuring module is mechanically set at the module itself and the display cannot be changed here.
- **All other settings:** Please consult the respective measuring module's operating instructions for a description of the other settings, their meaning as well as acceptable values.

- Overview
- Basic Module Info
- RM-Bus Configuration
- Logfile
- Change Password

## RM-PL NiCr Module Configuration

This page allows the configuration of the module's settings.

Enter the new settings for the module below:

**Basic**

Software Version: V200

Module Number:

Service Time:  sec. 0...999

Alarm Hyst. Fault Loc.:  % 0.0 ... 100.0

Storage Interval:  
Once per

disable

Minute

Hour

Day

Week

**Channel 1: Isolation**

Alarm Value:  kOhm 0...50000

Filter Value:  1...16

Alarm Type:  0...3

Alarm Delay:  min. 0...9999

**Channel 1: Loop**


LANCIER Monitoring GmbH  
Gustav-Stresemann-Weg 11  
48155 Muenster  
Phone: +49 (0) 251 674 999-0  
Fax: +49 (0) 251 674 999-99  
mail@lancier-monitoring.de

Changed settings must be acknowledged by clicking the button „**Save Config**”. Once the page has saved, it will be reloaded and display the changed values. Click on the "**Back**" button to leave the page without saving your changes.

### 3. Fault localisation

#### (only NiCr measuring modules in combination with RM-PL Basic plus)

By clicking on the "Show" link (underlined in blue) in the last, "Values" column, the corresponding display window will open.

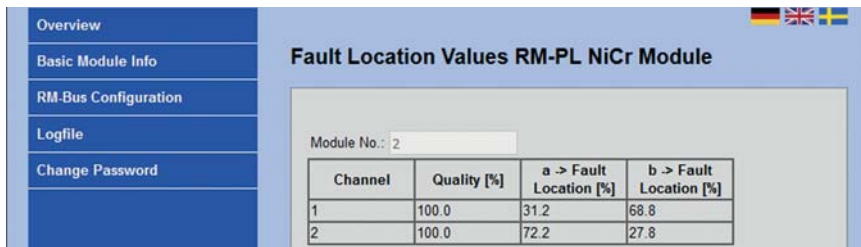


Channel	Quality [%]	a -> Fault Location [%]	b -> Fault Location [%]
1	100.0	31.2	68.8
2	100.0	72.2	27.8

The module name and number, the quality of fault localisation (only NiCr measuring modules in combination with RM-PL Basic plus) as well as the fault location in percent of the measuring track.

By clicking on the "**Refresh**" button, the module's latest values will be read out. Click on the "**Back**" button to leave the page.

### 4. Information and values (only TX measuring modules)

By clicking on the "Show" link (underlined in blue) in the last, "Values" column, the corresponding display window will open.

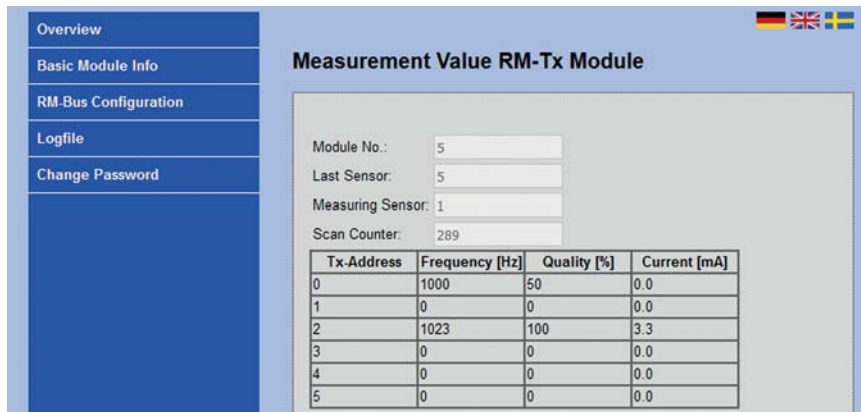

Tx-Address	Frequency [Hz]	Quality [%]	Current [mA]
0	1000	50	0.0
1	0	0	0.0
2	1023	100	3.3
3	0	0	0.0
4	0	0	0.0
5	0	0	0.0

The module name and number as well as information about the Tx-bus will be displayed.

By clicking on the "**Refresh**" button, the module's latest values will be read out. Click on the "**Back**" button to leave the page.

## 4. Logfile

This menu item is only available on the **RM-PL Basic plus** module.


Here, all saved measurement values can be downloaded onto the local PC/laptop as a log file in CSV format.

An evaluation of the values can provide information about changes on the measuring section, for example possible shifts in fault location, which may indicate the occurrence of further leakage points.



### Download log file

- By clicking on the "Download log file" button, the browser's communication window will open.
- Depending on the used PC's/laptop's specifications an option to open/save the file will be displayed.

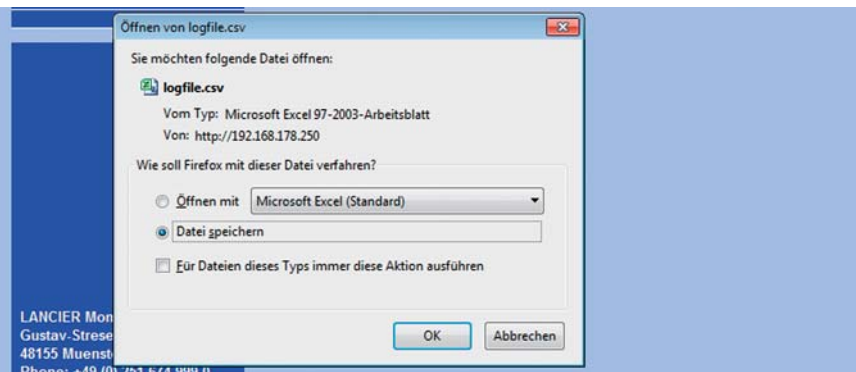

### Log file evaluation

Particularly when a PipeMonitor RM-PL-NiCr module has triggered the "Shift in fault location" alarm, we recommend that you evaluate the log files.

The occurrence and position of further leakage points can be determined on the basis of the stored data.

**The following values are represented in the log file:**

Date	The date the measured value was saved (from the module's real time clock)
Time	The time the measured value was saved (from the module's real time clock)
Message type	Entry type: 0 = system message, e.g. "Reboot" (restart occurs) 1 = alarm message 2 = status message, e.g. as "value measured"
Modules	Measuring module type
No.	Measuring module number
Ch1 Iso Value	Insulation resistance value of 1 <sup>st</sup> measuring channel
Ch1 Iso State	Insulation resistance alarm status of 1 <sup>st</sup> measuring channel
Ch1 Loop Value	Loop resistance value of 1 <sup>st</sup> measuring channel
Ch1 Loop State	Loop resistance alarm status of 1 <sup>st</sup> measuring channel
Ch2 Iso Value	Insulation resistance value of 2 <sup>nd</sup> measuring channel
Ch2 Iso State	Insulation resistance alarm status of 2 <sup>nd</sup> measuring channel
Ch2 Loop Value	Loop resistance value of 2 <sup>nd</sup> measuring channel
Ch2 Loop State	Loop resistance alarm status of 2 <sup>nd</sup> measuring channel
	The following applies for all alarm states: 0 = within the thresholds 1 = alarm 2 = acknowledged alarm
Ch1 FL Quality	Quality of fault localisation in percent for measuring channel 1
Ch1 a->f	Distance of fault location in percent from the beginning of the track for measuring channel 1
Ch1 f<-b	Distance of fault location in percent from the end of the track for measuring channel 1
Ch2 FL Quality	Quality of fault localisation in percent for measuring channel 2
Ch2 a->f	Distance of fault location in percent from the beginning of the track for measuring channel 2
Ch2 f<-b	Distance of fault location in percent from the end of the track for measuring channel 2
Message	Content of the system messages, e.g. "Reboot" (restart occurs)

---





## 5. Change password

Here the user name and password can be changed.

Overview

Basic Module Info

RM-Bus Configuration

Logfile

Change Password

LANCIER Monitoring GmbH  
Gustav-Stresemann-Weg 11  
48155 Muenster  
Phone: +49 (0) 251 674 999-0  
Fax: +49 (0) 251 674 999-99

**Change Password**

Please specify your username and password for the RM-Basic webserver . If you want to use RM-Basic without username and password please leave "New" fields empty and press "Save" button.

**CAUTION:** Incorrect settings may cause the module to lose network connectivity.

Enter the new username and password below.

Old

Enter Username:

Enter Password:

New

Enter Username:

Enter Password:

Confirm Password:

Save

- Enter the previous **user name** and previous **password** in the appropriate fields at the top and
- the new **user name** and new **password** (twice) in the appropriate lower fields and click on the "Save" button.  
The new password will be valid immediately.
- A login using the new access data will then follow.


Alternatively **disable password protection**.


- To disable password protection leave the **user name** and **password** fields blank (twice) and click on the "Save" button.  
Access to the RM basic module's configuration will now no longer be protected by a password request.
- A login using the new blank login data will then follow.


## 6. Help if the password is lost

If the password has been changed and is no longer known, this can only be remedied directly on the basic module.

More information:

1. Switch off the basic module/disconnect from the power supply.
2. Keep the middle arrow button  pressed and turn on the basic module/reconnect to the power supply.

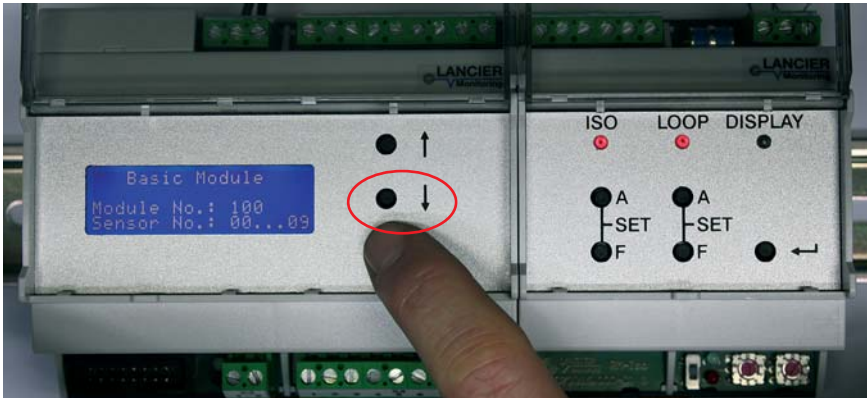

3. Keep the middle arrow button  pressed until the display shows "Factory reset".

The basic module has now been reset to factory settings:

- The network settings and password have been deleted.
- The module number, date and time are retained.

4. You can now login using the original factory-set login data:

**User name:** http

**Password:** http



**LANCIER Monitoring GmbH**

Gustav-Stresemann-Weg 11  
48155 Münster, Germany

Tel. +49 (0) 251 674 999-0

Fax+49 (0) 251 674 999-99

mail@lancier-monitoring.de

www.lancier-monitoring.de

## EC Declaration of Conformity

We declare under our sole responsibility, that the product

**Make:** LANCIER Monitoring  
**Type:** Basic module RM-PL Basic  
Basic module RM-PL Basic plus

to which this declaration refers, meets the relevant health and safety requirements of the following EC directives:

**2014/30/EU** Electromagnetic compatibility  
**2011/65/EU** RoHS-II

For proper implementation of the health and safety requirements named in the EC directives the following standard(s) and/or technical specification(s) have been consulted:

**EN 61326-1** Electrical equipment for measurement, control and laboratory use - EMC requirements (class B)

Münster, 07.11.2016

  
Research and Development

  
Managing Director